invensys
Eurotherm

# EPower™

MODEL




## Power management and control units

## Specification Sheet

- Fully software configurable
- Predictive Load Management
- Current rating 50A to 630A (nominal load 16A to 630A)
- Voltage up to 690V ac
- All types of firing modes
- Measurement accuracy <1%
- Large integral four row display
- Remote display option
- Multi-channel unit
- Event Log
- Optional I/O
- Modbus RTU comms
- Profibus DP comms
- DeviceNet® comms
- Ethernet (Modbus TCP) comms
- EtherNet/IP comms
- CC-Link comms
- Profinet IO comms
- Voltage, current and power control
- Complete diagnostics
- Energy counter
- Single phase Load Tap Changer

EPower™ is the Eurotherm® series of advanced power control units. Combining the advantages of the latest technologies and innovations to produce a truly impressive performance for your process.

**Ratings**
The EPower current ratings cover the range from 50 Amps up to 630 Amps (nominal 16 Amps to 630 Amps). Ratings are designed at 40°C, but operation can be defined up to 50°C with associated deratings. The voltage rating can go up to a maximum of 690 volts.

**Predictive Load Management (Patented)**
You can reduce your energy costs across your plant by using the Predictive Load Management functionality within EPower. This innovative feature provides a better distribution of energy across different loads in your installation by managing the priority and if necessary, load shedding.

**Multi Channel Unit**
EPower includes seven different power configurations within one unit, depending on the number of power modules fitted. From single phase configuration to two times two phase control, the unit is perfectly modular and configurable to your process requirements. Multiple zones can be controlled with one unit.

Many more features are available (Log file management, advanced alarm strategy, optional I/O…) to provide you with the best of the technology for your process.

**Display and Remote Display**
EPower is fitted with a 4 line x 10 character display with indication of the process values, and diagnostic information, along with an alarm and event message centre. Optionally, the EPower has a 32h8e remote display to allow for the process values and alarm information to be presented front of panel in a clear and unambiguous way. Secure access to the local setpoint is also provided to allow for local control when needed. The remote display, as an indicator, can also provide over temperature policeman functionality removing the need

### Communication
Eurotherm has an approach to open communications, offering standard fieldbus networks such as Modbus RTU, Profibus DP, DeviceNet®, Ethernet (Modbus TCP), EtherNet/IP, CC-Link and Profinet IO communications.. The use of Fieldbus makes integration into PLCs and other supervisory systems easy to accomplish. It allows an easier integration into PLCs and other supervisory systems by using the main protocols of the market.

### Configuration
"Quick Start" HMI menus provide an easy and friendly way to quickly configure the unit. With the more complex configurations using the iTools software package.



## General specification

### General Standards
The product is designed and produced to comply with EN60947-4-3 (Low voltage switch gear and control gear). Other applicable standards are cited where appropriate.

### Installation Categories
General installation category details for the driver and power units are summarised in the table below.

| | Installation Category | Rated impulse withstand voltage (Uimp) | Rated insulation voltage |
|---|---|---|---|
| Communications | II | 0.5kV | 50V |
| Standard I/O | II | 0.5kV | 50V |
| Driver module power | II | 2.5kV | 230V |
| Relays | III | 4kV | 230V |
| Power Modules (up to 600V) | III | 6kV | 600V |
| Power Modules (690V) | II | 6kV | 690V |
| Auxiliary (Fan) supply | II | 2.5kV | 230V |

Table 1 Installation category details

### Power (at 40°C)

**Caution**

Although the driver module supply voltage range is 85 to 265V ac, the fans (if any) fitted to the power (thyristor) modules are specified for use at one of 115V ac or 230V ac as specified at time of order. Before plugging the fan harness into the driver module, ensure that the utility supply voltage is suitable for the fan(s). Otherwise, fan life may be shortened or the cooling effect may not be sufficient, either case presenting a possible hazard to the equipment or to the operator.

Driver module

| | |
|---|---|
| Voltage range: | 100 to 240V ac (+10% - 15%) |
| Frequency range: | 47 to 63Hz |
| Power requirement: | 60W + Power Module fans (15W each for 400A/500A/630A power modules; 10W each for 160A/250A modules) |
| Installation Category | Installation category II (category III for relays) |

Power module

| | |
|---|---|
| Number of modules: | Up to four identical units per Driver Module |
| Voltage range: | 100 to 600V ac (+10% - 15%) or 100 to 690V ac (+10% - 15%) as specified at time of order |
| Frequency range: | 47 to 63Hz |
| Nominal current: | 16 to 630A depending on power module |
| Power dissipation: | 1.3W per Amp per phase |
| Rated short-circuit conditional current: | CE Rated. 92kA all modules except: 98kA for 500A modules; 105kA for 630A modules. Note: this is not a UL508A test |

Cooling

| | |
|---|---|
| Up to and including 100A: | Natural convection |
| Above 100A: | Fan cooling. Fans are connected in parallel to driver module connector |
| Fan supply voltage: | 115 or 230V ac, as specified at time of order (see 'Caution' above) |
| Fan power requirement: | 10W for 160A/250A modules; 15W for 400A, 500 and 630A modules |
| Protection Thyristor drive: | RC circuits and high-speed fuses |
| Pollution degree: | Pollution degree 2 (EN60947-1) |
| Installation category Power network: | Installation category III up to 600V; Installation category II up to 690V |
| Auxiliary (fan) supply: | Installation category II assuming nominal phase voltage with respect to earth is ≤300V rms |
| Utilisation categories AC51: | non inductive or slightly inductive loads, resistance furnaces |
| AC56a: | switching of transformers |
| Duty cycle: | Uninterrupted duty/continuous operation |
| Form designation: | Form 4 |
| Short circuit protection co-ordination type: | Type1 (fuses) |
| Load types: | Single or multiphase control of resistive loads (low/high temperature coefficient and non-aging/aging types) and transformer primaries. Load voltage/current feedback either internal (standard) or external (option for use with transformer secondaries for example) |

### Physical

Dimensions and fixing centres: See Fixing Details

Weight: See Table 2 (weights ± 50gm (2oz)

| Current | Weight (including 2kg (4.4lb) for driver module) 1 phase | 2 phases | 3 phases | 4 phases |
|---|---|---|---|---|
| 50A/100A | 6.5 (14.3) | 11.0 (24.3) | 15.5 (34.2) | 20.0 (44.1) |
| 160A | 6.9 (15.2) | 11.8 (26.0) | 16.7 (36.8) | 21.6 (47.6) |
| 250A | 7.8 (17.2) | 13.6 (30.0) | 19.4 (42.8) | 25.2 (55.6) |
| 400A | 11.8 (26.0) | 21.6 (47.6) | 31.4 (69.2) | 41.2 (90.8 |
| 500A | 14.0 (30.9) | 26.0 (57.3) | 38.0 (83.8) | 50.0 (110.2) |
| 630A | 14.5 (32.0) | 27.0 (59.5) | 39.5 (87.1) | 52.0 (114.6) |


Table 2 Weights

| lb | oz |
|---|---|
| 0.1 | 1.6 |
| 0.2 | 3.2 |
| 0.3 | 4.8 |
| 0.4 | 6.4 |
| 0.5 | 8.0 |
| 0.6 | 9.6 |
| 0.7 | 11.2 |
| 0.8 | 12.8 |
| 0.9 | 14.4 |

### Environment

Temperature limits Operating: 0°C to 50°C (derate above 40°C as per accompanying curves)

Storage: -25°C to 70°C

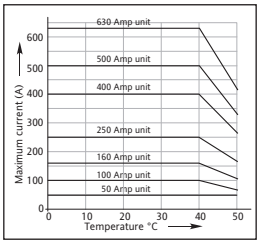


| | |
|---|---|
| Humidity limits: | 5% to 95% RH (non-condensing) |
| Altitude (maximum): | 1000 metres |
| Protection: | IP10 (EN60529) |
| Atmosphere: | Non-explosive, non-corrosive and non-conductive |
| External wiring: | Must comply with IEC 364 |
| Shock (EN60068-2-29): | 10g Peak; 6ms duration; 100 bumps |
| Vibration (EN60068-2-6): | 67-150Hz at 1g |

### EMC

Standard: EN60947-4-3 Emissions class A
This product has been designed for environment A (Industrial). Use of this product in environment B (domestic, commercial and light industrial) may cause unwanted electromagnetic disturbances in which cases the user may be required to take adequate mitigation measures.

Immunity criteria: Immunity criterion 1 (criterion 3 for voltage dips and short-time interruptions)

### Operator Interface

Display: 4 lines of up to 10 characters each. Display pages can be used to view process variable values and to view and edit the configuration of the unit. (Editing of the configuration is better carried out using configuration software (iTools). In addition to the standard displays, up to four 'custom' pages can be defined which allow bargraph displays, text entry etc.

Character format: 7 high x 5 wide yellow-green LCD dot matrix array

Push buttons: 4 push buttons provide page and item entry and scroll facilities

LED indicators (beacons): 3 indicators (PWR LOC and ALM) are supplied to indicate that power is applied, that Local Control is selected and that there is one or more active alarm respectively

## Standard Inputs/Outputs (SK1)

All figures are with respect to driver module 0V, unless otherwise stated.

Number of inputs/outputs
- No of analogue inputs: 2
- No of analogue outputs: 1
- No of digital inputs/outputs: 2 (each configurable as an input or an output)
- 10V (Potentiometer) supply: 1

Update rate: Twice the mains frequency applied to power module 1. Defaults to 83.2Hz (12ms) if no power applied to power module1 or if supply frequency lies outside the range 47 to 63Hz)

Termination: Removable 10-way connector. (5.08 mm. pitch)

### Analogue Inputs

Performance: See Tables 3 and 4

Input types: Each input is configurable as one of: 0 to 10V, 1 to 5V, 2 to 10V, 0 to 5V, 0 to 20mA, 4 to 20 mA

Absolute maxima + terminal: ±16V or ±40mA
- terminal: ±1.5V or ±300mA

### Analogue outputs

Performance: See Tables 5 and 6

Output types: Each output is configurable as one of 0 to 10V, 1 to 5V, 2 to 10V, 0 to 5V, 0 to 20mA, 4 to 20 mA

Absolute maxima + terminal: (-0.7V or -300mA) or (+16V or +40mA)
0V terminal: ±2A

| Analogue input: Voltage input performance | | |
|---|---|---|
| **Parameter** | **Typical** | **Max/Min** |
| Total voltage working input span (Note 1) | | -0.25V to +12.5V |
| Resolution (noise free) (Note 2) | 13 bits | |
| Calibration error (Notes 3 and 4) | <0.25% | <0.5% |
| Linearity error (Note 3) | | ±0.1% |
| Ambient temperature error (Note 3) | | <0.01%/°C |
| Input resistance (+'ve terminal to 0V) | | >140kΩ |
| Input resistance (-'ve terminal to 0V) | 150Ω | |
| Allowable voltage (-'ve terminal to 0V) | | ±1V |
| Series mode rejection of mains interference | 46dB | >30dB |
| Common mode dc rejection | 46dB | >40dB |
| Hardware response time | 5ms | |
| **Note 1:** w.r.t. to the relevant -'ve input<br>**Note 2:** w.r.t. total working span<br>**Note 3:** % of effective range (0 to 5V, 0 to 10V)<br>**Note 4:** After warm up. Ambient = 25°C | | |

Table 3 Analogue input specification table (voltage inputs)

| Analogue input: Current input performance | | |
|---|---|---|
| **Parameter** | **Typical** | **Max/Min** |
| Total current working input span | | -1mA to +25mA |
| Resolution (noise free) (Note 1) | 12 bits | |
| Calibration error (Notes 2 and 3) | <0.25% | <0.5% |
| Linearity error (Note 2) | | ±0.1% |
| Ambient temperature error (Note 2) | | <0.01%/°C |
| Input resistance (+'ve to -'ve terminal) | 235Ω | |
| Input resistance (-'ve terminal to 0V) | 150Ω | |
| Allowable voltage (-'ve terminal to 0V) | | <±1V |
| Series mode rejection of mains interference | 46dB | >30dB |
| Common mode dc rejection | 46dB | >40dB |
| Hardware response time | 5ms | |
| **Note 1:** w.r.t. total working span<br>**Note 2:** % of effective range (0 to 20mA)<br>**Note 3:** After warm up. Ambient =25°C | | |

Table 4 Analogue input specification table (current inputs)

| Analogue output: Voltage output performance | | |
|---|---|---|
| **Parameter** | **Typical** | **Max/Min** |
| Total voltage working span (within ±20mA (typ.) current span) | | -0.5V to +12.5V |
| Short circuit current | | <24mA |
| Resolution (noise free) (Note 1) | 12.5 bits | |
| Calibration error (Notes 2 and 3) | <0.25% | <0.5% |
| Linearity error (Note 2) | | <±0.1% |
| Ambient temperature error (Note 2) | | <0.01%°C |
| Minimum load resistance | | >800Ω |
| DC output impedance | | <2Ω |
| Hardware response time (10% to 90%) | 20ms | <25ms |
| **Note 1:** w.r.t. total working span<br>**Note 2:** % of effective range (0 to 5V, 0 to 10V)<br>**Note 3:** After warm up. Ambient = 25°C | | |

Table 5 Analogue output specification table (voltage outputs)

| Analogue output: Current output performance | | |
|---|---|---|
| **Parameter** | **Typical** | **Max/Min** |
| Total current working span (within -0.3V to +12.5V voltage span) | | -24mA to +24mA |
| Open circuit voltage | | <16V |
| Resolution (noise free) (Note 1) | 12.5 bits | |
| Calibration error (Notes 2 and 3) | <0.25% | <0.5% |
| Linearity error (Note 2) | | <±0.1% |
| Ambient temperature error (Note 2) | | <0.01%°C |
| Maximum load resistance | | <550Ω |
| DC Output conductance | | <1µA/V |
| Hardware response time (10% to 90%) | 20ms | <25ms |
| **Note 1:** w.r.t. total working span<br>**Note 2:** % of effective range (0 to 20mA)<br>**Note 3:** After warm up. Ambient = 25°C | | |

Table 6 Analogue output specification table (current outputs)

### 10V supply (Potentiometer supply)

Output voltage: 10.0V ± 0.3V @ 5.5mA

Short circuit o/p current: 15mA max.

Ambient temperature drift: ± 0.012%/°C (typ); ±0.04%/°C (max.)

Absolute maxima Pin 1: (-0.7V or -300mA) or (+16V or +40mA)

### Digital I/O

Hardware response time: 100µs

Voltage inputs
- Active level (high): 4.4V<Vin<30V
- Non-active level (low): -30V<Vin<+2.3V
- Input impedance: 10kΩ

Contact closure inputs
- Source current: 10mA min; 15mA max
- Open contact (non active) resistance: >500Ω
- Closed contact (active) resistance: <150Ω


Current source output
- Source current: 9mA<$I_{source}$<14mA @ 14V
  10mA<$I_{source}$<15mA @ 0V
  9mA<$I_{source}$<14mA @ -15V
- Open circuit voltage: <14V
- Internal pull-down resistance: 10kΩ (to 0V)

Absolute maxima + terminal: ±30V or ±25mA
0V terminal: ±2A

**Notes:**
1. Absolute maximum ratings refer to externally applied signals
2. The 10V potentiometer supply is designed to supply two 5kΩ potentiometers connected in parallel with one another.
3. The maximum current for any 0V terminal is ±2A.

### Relay Specification

The relays associated with this product have gold plated contacts applicable to 'dry circuit' (low current) use.

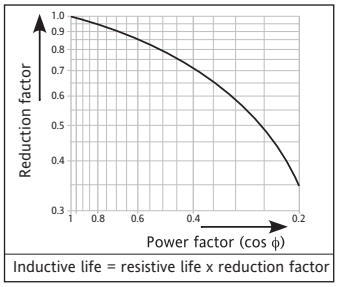

Inductive life = resistive life x reduction factor

| | | |
|---|---|---|
| Contact life | Resistive loads: | 100,000 operations (de-rate with inductive loads as per figure) |
| High power use | Current: | <2A (resistive loads) |
| | Voltage: | <264V RMS |
| Low power use | Current: | >1mA |
| | Voltage: | >1V |
| Contact configuration: | | Single pole change-over (One set of Common, Normally Open and Normally Closed contacts) |
| Termination | Relay 1 (standard): | 3-way connector on underside of driver module |
| | Watchdog relay (standard): | 3-way connector on underside of driver module |
| | Relays two to four (option): | 12-way option module connector |
| Installation Category | | Installation category III, assuming that nominal phase to earth voltage is ≤300V RMS. Isolation between different relays' contacts is double isolation, in accordance with the installation category and phase to earth voltage specified above. |

Absolute max switching capability: <2A at 240V RMS (resistive loads)

**Note:** Normally closed and normally open refer to the relay when the coil is not energised.

## Optional Input/Output Modules (SK3, SK4, SK5)

Up to three input/output modules can be fitted, each containing the inputs and outputs detailed below. Unless otherwise stated below, the specification for the optional I/O (including relays) is as given above for the standard I/O.

| | |
|---|---|
| Termination: | Removable 12-way (5.08mm pitch) connector per module |
| Number of modules: | Up to 3 |
| Number of inputs: | 1 analogue input and 2 digital inputs per module |
| Number of outputs: | 1 analogue output per module |
| Number of relays: | 1 set of common, normally open and normally closed contacts per module |
| 10V potentiometer supply output voltage: | 10.0V ±0.3V at 5.5mA |

## Mains Network Measurements

All network measurements are calculated over a full mains cycle, but internally updated every half-cycle. For this reason, power control, current limits and alarms all run at the mains half-cycle rate. The calculations are based on waveform samples taken at a rate of 20kHz. Measurements on each phase are synchronised to its own phase and if the line voltage cannot be detected, the measurements stop for that phase. It should be noted that, depending on the configuration, the phase voltage referred to is one of:

a. the line voltage referenced to neutral in four star,
b. the line voltage referenced to neutral or another phase for single phase networks or
c. the line voltage referenced to the phase applied to the next adjacent power module for three phase star or delta networks.

The parameters below are directly derived from measurements for each phase.

Accuracy (20 to 25°C)

| | |
|---|---|
| Line RMS voltage (Vline): | ±0.5% of Nominal Vline |
| Load RMS voltage (V): | ±0.5% of Nominal V for voltage readings >1% of Nominal V. Unspecified for readings lower than 1%Vnom |
| Thyristor RMS current ($I_{RMS}$): | ±0.5% of Nominal $I_{RMS}$ for current readings >3.3% of Nominal $I_{RMS}$ Unspecified for readings = 3.3% Nominal $I_{RMS}$ |
| Note: | For external current feedback the above specification does not include errors associated with external current transformers. |
| Load RMS voltage squared (Vsq): | ±1% of (Nominal V)$^2$ |
| Thyristor RMS current squared (Isq): | ±1% of (Nominal I)$^2$ |
| True load power (P): | ±1% of (Nominal V) x (Nominal I) |
| Frequency resolution: | 0.1Hz |
| Measurement resolution: | 11 bits of Nominal value (noise free) |
| Meas. drift with ambient temp: | <0.02% of reading /°C |

Further parameters (S, PF, Q, Z, Iavg, IsqBurst, IsqMax, Vavg, Vsq Burst, VsqMax and PBurst) are derived from the above, for each network (if relevant). See EPower User Guide Section (Meas submenu) for further details.

## External Current Transformer


| | |
|---|---|
| Ratio: | Chosen such that the full scale output from the current transformer is 5 Amps |


## Communications

| | | |
|---|---|---|
| CC-Link | Protocol: | CC-Link version 1.1 |
| | Connector: | 5-way |
| | Indicators: | RUN and ERR |
| DeviceNet | Protocol: | DeviceNet |
| | Connector: | 5-way |
| | Indicators: | Network status and Module status |
| EtherNet | Type: | 10baseT (IEEE801) |
| | Protocol: | Modbus TCP |
| | Connector: | RJ45 |
| | Indicators: | Tx activity (green) and communications activity (yellow) |
| EtherNet/IP | Protocol: | EtherNet/IP |
| | Connector: | RJ45 |
| | Indicators: | NS (Network status), MS (Module status) and LINK (Link status) |
| Modbus RTU | Protocol: | Modbus RTU slave |
| | Transmission standard: | 3-wire EIA485 |
| | Connector: | Twin, parallel-wired RJ45 |
| | Indicators: | Tx activity (green) and Rx activity (yellow) |
| | Isolation (EN60947-4-3): | Installation category II, Pollution degree 2 |
| | Terminals to ground: | 50V RMS or dc to ground (double isolation) |
| Profibus | Protocol: | Profibus DPV1 |
| | Connector: | 9-way D-type |
| | Indicators: | Mode and Status |
| Profinet | Protocol: | Profinet IO |
| | Connector: | R J45 |
| | Indicators: | NS (Network status), MS (Module status) and LINK (Link status). |

# Electrical Installation

## Drive Module Connectors

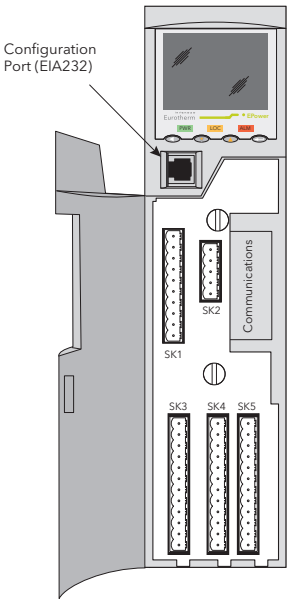

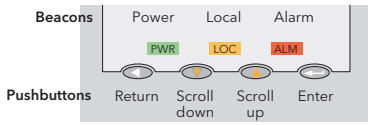
**SK1 Standard I/O**

| | | |
|---|---|---|
| 1 | 1 | +10 Volts out |
| | 2 | Analogue i/p 1 + |
| | 3 | Analogue i/p 1 – |
| | 4 | Analogue i/p 2 + |
| | 5 | Analogue i/p 2 – |
| | 6 | Analogue o/p 1 + |
| | 7 | Analogue o/p 1 0V |
| | 8 | Digital i/o 1+ |
| | 9 | Digital i/o 2+ |
| 10 | 10 | Digital i/o 0V |

**SK2 Predictive Load Management Option**

| | | |
|---|---|---|
| 1 | 1 | Terminator A |
| | 2 | Low |
| | 3 | Shield |
| | 4 | High |
| 5 | 5 | Terminator B |




■ = Polarising pin

**SK3 Optional I/O 1**

| | | |
|---|---|---|
| 1 | 1 | +10 Volts out |
| | 2 | Analogue i/p 3 + |
| | 3 | Analogue i/p 3 – |
| | 4 | Analogue o/p 2 + |
| | 5 | Analogue o/p 2 0V |
| | 6 | Digital i/p 3 + |
| | 7 | Digital i/p 4 + |
| | 8 | Digital 0V |
| | 9 | Not used |
| | 10 | Relay 2 NO (24) |
| | 11 | Relay 2 Com (21) |
| 12 | 12 | Relay 2 NC (22) |

Polarising pins:
Fixed connector: pins 1 and 2;
Mating connector: pin 3

**SK4 Optional I/O 2**


| | | |
|---|---|---|
| 1 | 1 | +10 Volts out |
| | 2 | Analogue i/p 4 + |
| | 3 | Analogue i/p 4 – |
| | 4 | Analogue o/p 3 + |
| | 5 | Analogue o/p 3 0V |
| | 6 | Digital i/p 5 + |
| | 7 | Digital i/p 6 + |
| | 8 | Digital 0V |
| | 9 | Not used |
| | 10 | Relay 3 NO (34) |
| | 11 | Relay 3 Com (31) |
| 12 | 12 | Relay 3 NC (32) |


Polarising pins:
Fixed connector: pins 2 and 3;
Mating connector: pin 1

**SK5 Optional I/O 3**

| | | |
|---|---|---|
| 1 | 1 | +10 Volts out |
| | 2 | Analogue i/p 5 + |
| | 3 | Analogue i/p 5 – |
| | 4 | Analogue o/p 4 + |
| | 5 | Analogue o/p 4 0V |
| | 6 | Digital i/p 7 + |
| | 7 | Digital i/p 8 + |
| | 8 | Digital 0V |
| | 9 | Not used |
| | 10 | Relay 4 NO (44) |
| | 11 | Relay 4 Com (41) |
| 12 | 12 | Relay 4 NC (42) |

Polarising pins:
Fixed connector: pins 1 and 3;
Mating connector: pin 2

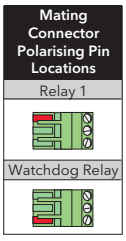

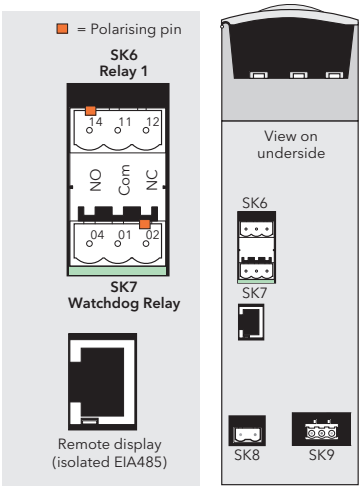







| Safety Earth Details | | | |
|---|---|---|---|
| Max. load current | Minimum earth cable cross-section | Earth Terminal | |
| | | Size | Tightening torque |
| 50/100A | 25 mm² | M6 | 5 Nm (3.7 ft lb) |
| 160A | 35 mm² | M6 | 5 Nm (3.7 ft lb) |
| 250A | 70 mm² | M8 | 12.5 Nm (9.2 ft lb) |
| 400A | 120 mm² | M10 | 15 Nm (11.1ft lb) |
| 500A | 150 mm² | M12 | 25 Nm (18.4 ft lb) |
| 630A | 185 mm² | M12 | 25 Nm (18.4 ft lb) |

## Power Module Connectors

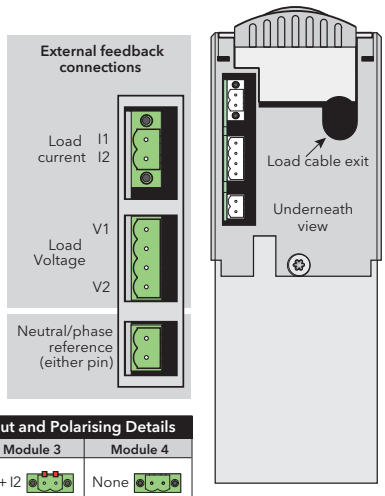




| External Feedback Connector Pinout and Polarising Details | | | | |
|---|---|---|---|---|
| | Module 1 | Module 2 | Module 3 | Module 4 |
| Current external feedback connector | I2 / I1 | I1 / I2 | I1 + I2 / None | None / I1 + I2 |
| Voltage external feedback connector | V1 / V2 | V2 / V1 | V1 + V2 / None | None / V1 + V2 |
| Neutral/ phase reference connector | | | | |


| Line/Load Termination Details | | | |
|---|---|---|---|
| Max. load current | Terminal size | Minimum cable cross-section | Recommended torque setting |
| 50/100A | M8 | 35 mm² | 12.5 Nm (9.2 ft lb) |
| 160A | M8 | 70 mm² | 12.5 Nm (9.2 ft lb) |
| 250A | M10 | 120 mm² | 25 Nm (18.4 ft lb) |
| 400A | M12 | 240 mm² | 28.8 Nm (21.2 ft lb) |
| 500A | 2 x M12 | 2 x 150 mm² | 30 Nm (22.1 ft lb) |
| 630A | 2 x M12 | 2 x 185 mm² | 30 Nm (22.1 ft lb) |

# Communications

## DeviceNet Connector Pinout

| Pin | Function |
|---|---|
| 1 | V- (negative bus supply voltage) |
| 2 | CAN_L |
| 3 | Cable shield |
| 4 | CAN_H |
| 5 | V+ (positive bus supply voltage) |

**Notes:**
1. See DeviceNet specification for power supply specification
2. During startup, an LED test is performed, satisfying the DeviceNet standard.




| Network Status LED Indication | |
|---|---|
| **LED state** | **Interpretation** |
| Off | Off-line or no power |
| Steady green | On-line to 1 or more units |
| Flashing green | On-line - no connections |
| Steady red | Critical link failure |
| Flashing red | 1 or more connections timed out |


| Module Status LED Indication | |
|---|---|
| **LED state** | **Interpretation** |
| Off | No power |
| Steady green | Operating normally |
| Flashing green | Missing or incomplete configuration |
| Steady red | Unrecoverable fault(s) |
| Flashing red | Recoverable fault(s) |

## Modbus RTU Pinout

| Pin | Signal (EIA485) |
|---|---|
| 8 | Reserved |
| 7 | Reserved |
| 6 | N/C |
| 5 | N/C |
| 4 | N/C |
| 3 | Isolated 0V |
| 2 | A |
| 1 | B |

Internal connections:
Pin 1 to 5V via 100k
Pin 2 to 0V via 100k

LEDs:
Green = Tx activity
Yellow = Rx activity





Connectors in parallel

## Profibus Connector Pinout

| Pin | Function | Pin | Function |
|---|---|---|---|
| 9 | N/C | 5 | Isolated ground |
| 8 | A (RxD-/TxD-) | 4 | RTS |
| 7 | N/C | 3 | B (RxD+/TxD+) |
| 6 | +5 V (1) | 2 | N/C |
| | | 1 | N/C |

**Notes:**
1. Isolated 5 Volts for termination purposes. Any current drawn from this terminal affects the total power consumption.
2. The cable screen should be terminated to the connector housing.





| Operation Mode LED Indication | |
|---|---|
| **LED state** | **Interpretation** |
| Off | Off-line or no power |
| Steady green | On-line, data exchange |
| Flashing green | On-line, clear |
| Red single flash | Parametrisation error |
| Red double flash | Profibus configuration error |

| Status LED Indication | |
|---|---|
| **LED state** | **Interpretation** |
| Off | No power or not initialised |
| Steady green | Initialised |
| Flashing green | Diagnostic event present |
| Steady red | Exception error |

## Modbus TCP (Ethernet 10baseT) Pinout

| Pin | Function |
|---|---|
| 8 | N/C |
| 7 | N/C |
| 6 | Rx- |
| 5 | N/C |
| 4 | N/C |
| 3 | Rx+ |
| 2 | Tx- |
| 1 | Tx+ |


LEDs:
Green = Tx activity
Yellow = Network activity




## CC-Link Connector Pinout

| Pin | Function | |
|---|---|---|
| 1 | DA (Rx+/Tx+) | 110R, 1/2W, 5% across pins 1 and 2 of first and last connectors |
| 2 | DB (Rx-/Tx-) | |
| 3 | DG (Signal ground) | |
| 4 | SLD (Cable Shield) | SLD and FG connected internally |
| 5 | FG (Protective Ground) | |

**Notes:**
1. A 110 Ohm (±5% 1/2 watt) terminating resistor should be connected across pins 1 and 2 of the connectors at each end of the transmision line.
2. The cable shield should be connected to pin 4 of each CC-Link connector.
3. The shield and Protective earth terminals (pins 4 and 5) are internally connected.




| 'RUN' LED Indication | |
|---|---|
| **LED state** | **Interpretation** |
| Off | Off-line or no power |
| Green | Normal operation |
| Red | Major fault (fatal error) |

| 'ERR' LED Indication | |
|---|---|
| **LED state** | **Interpretation** |
| Off | No error or no power |
| Steady red | Exception or fatal event |
| Flickering red | CRC Error |
| Flashing red | Station number of Buad rate has changed since startup |

## EtherNet/IP Connector Pinout

| Pin | Function |
|---|---|
| 1 | Tx+ |
| 2 | Tx- |
| 3 | Rx+ |
| 4 | N/C |
| 5 | N/C |
| 6 | Rx- |
| 7 | N/C |
| 8 | N/C |

| LINK LED Indication | |
|---|---|
| **LED state** | **Interpretation** |
| Off | No Link, no activity |
| Steady green | Link established |
| Flickering green | Activity in progress |




| NS (Network Status) LED Indication | |
|---|---|
| **LED state** | **Interpretation** |
| Off | No power or no IP address |
| Steady green | On-line, one or more connections established (CIP class 1 or 3) |
| Flashing green | On-line, no connections enabled |
| Steady red | Duplicate IP address, ('fatal' error) |
| Flashing red | One or more connections timed out (CIP class 1 or 3) |

| MS (Module Status) LED Indication | |
|---|---|
| **LED state** | **Interpretation** |
| Off | No power |
| Steady green | Controlled by a scanner in Run state |
| Flashing green | Not configuration or scanner in idle state |
| Steady red | Major fault (Exeption-state, fatal error etc.) |
| Flashing red | Recoverable fault |

## Profinet IO Connector Pinout

| Pin | Function |
|---|---|
| 1 | Tx+ |
| 2 | Tx- |
| 3 | Rx+ |
| 4 | N/C |
| 5 | N/C |
| 6 | Rx- |
| 7 | N/C |
| 8 | N/C |

| LINK LED Indication | |
|---|---|
| **LED state** | **Interpretation** |
| Off | No Link, no activity |
| Steady green | Link established; no activity |
| Flickering green | Activity in progress |




| NS (Network status) LED | |
|---|---|
| **LED state** | **Interpretation** |
| Off | No power or no connection with I/O Controller |
| Steady green | On-line (RUN); connection with IO controller estabished. Controller in 'Run' state |
| Flashing green | On-line (STOP); connection with IO controller estabished. Controller in 'Stop' state |


| MS (Module status) LED | | |
|---|---|---|
| **LED state** | **Interpretation** | |
| Off | Not initialised | No power or the module is in 'SETUP' or 'NW_INIT' state |
| Green steady | Normal operation | The module has shifted from the 'NW-INIT' state |
| Green 1 flash | Diagnostic event | One or more Diagnostic Event present |
| Green 2 flash | Blink | Used by engineering tools to identify the node on the network |
| Red steady | Exception error | The module is in 'EXCEPTION' state |
| Red 1 flash | Configuration error | The Expected Identification differs from the Real Identification |
| Red 2 flash | IP Address error | The IP address is not set |
| Red 3 flash | Station Name error | The Station Name is not set |
| Red 4 flash | Internal error | The module has encountered a major internal fault |

## General diagrams


**Caution**

1. Neutral/phase reference connections (if applicable) must be located between any isolating device and the relevant Power Module.
2. For single phase configurations, all Neutral reference connections must be individually fused.


### Single Phase Control

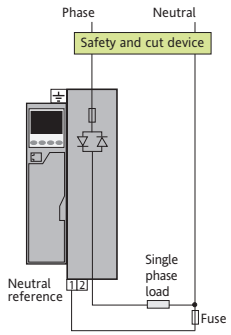



### Up to Four Single Phase Control with Independent Loads

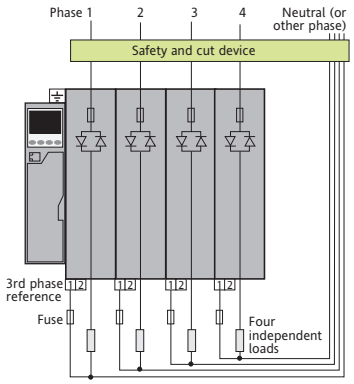



### Two Phase Control with Load Coupled in Delta or Star

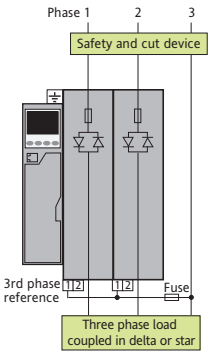



### Two times Two Phase Control with Loads Coupled in Delta or Star

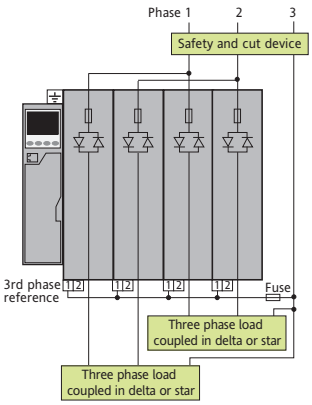



### Three Phase Control with Load Coupling in Delta or Star

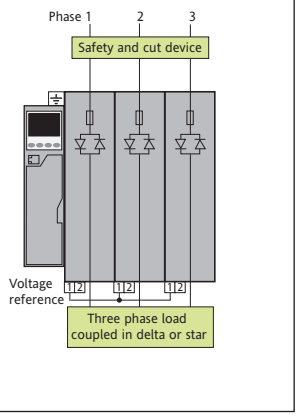


### Three Phase Control with Load Coupled in Open Delta

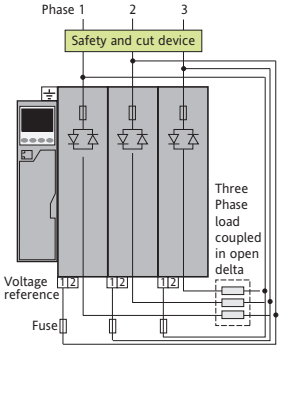


### Three Phase Control with Load Coupled in Star with Neutral

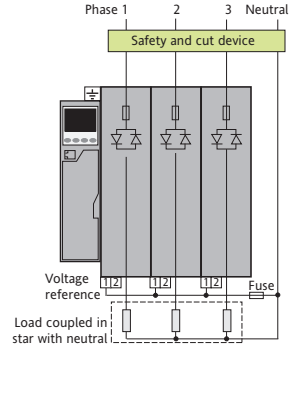

## **50A/100A** (drawing on the right)
## **160A/250A** (drawings next page)
## **Fixing Details**

**Note:** Units are shown with individual mounting brackets. Multi-phase units come supplied with 2, 3 or 4 phase brackets as appropriate. See table below for details.

Dimension **mm** (inches)


| 50/100/160/250 AMPS | Overall Widths | | | |
|---|---|---|---|---|
| No of phases | 1 | 2 | 3 | 4 |
| Door closed | **149.5** (5.89) | **234.5** (9.23) | **319.5** (12.58) | **404.5** (15.93) |
| Door open | **211.0** (8.31) | **296.0** (11.65) | **381.0** (15.00) | **466.0** (18.35) |


| Bracket | Upper | Lower |
|---|---|---|
| 2-phase | Use A & B | Use E & F |
| 3-phase | Use A, B & C | Use E, F & G |
| 4-phase | Use A, B, C & D | Use E, F G & H |



**50Amps/100Amps**

**FRONT VIEW**

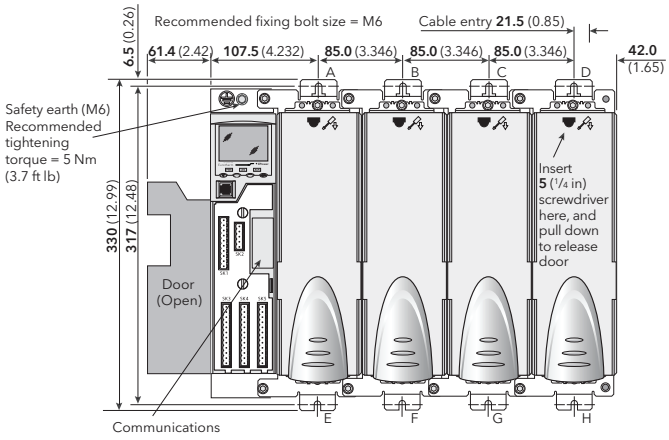

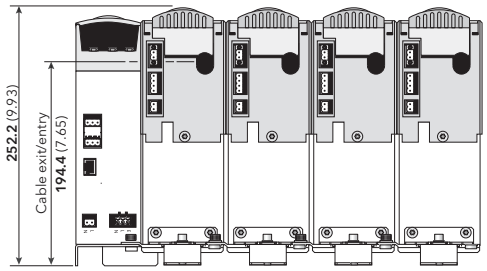
**VIEW ON UNDERSIDE**

## **400A** (drawing on the right)
## **500A/630A** (drawing next page)
## **Fixing Details**

**Note:** Units are shown with individual mounting brackets. Multi-phase units come supplied with 2, 3 or 4 phase brackets as appropriate. See table below for details.

Dimension **mm** (inches)


| 400/500/630AMPS | Overall Widths | | | |
|---|---|---|---|---|
| No of phases | 1 | 2 | 3 | 4 |
| Door closed | 189.5 (7.46) | 314.5 (12.38) | 439.5 (17.30) | 564.5 (22.22) |
| Door open | 251.0 (9.88) | 376.0 (14.80) | 501.0 (19.72) | 626.0 (24.65) |


| Bracket | Upper | Lower |
|---|---|---|
| 2-phase | Use A & B | Use E & F |
| 3-phase | Use A, B & C | Use E, F & G |
| 4-phase | Use A, B, C & D | Use E, F G & H |



**400Amps**

**FRONT VIEW**

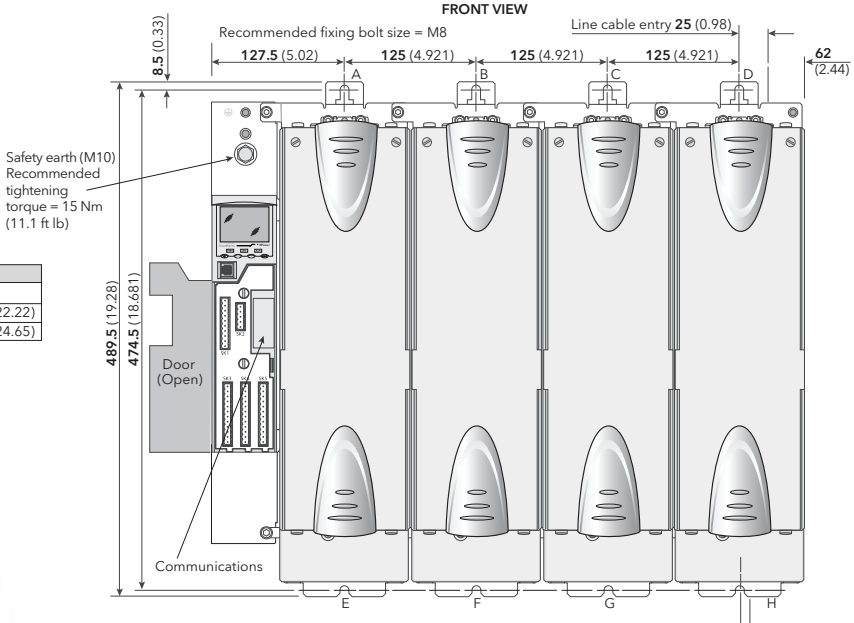


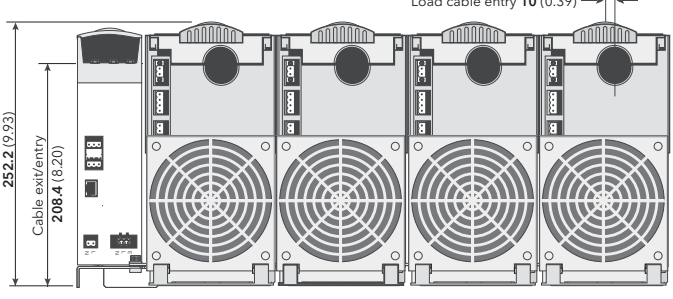




**VIEW ON UNDERSIDE**

**160Amps**

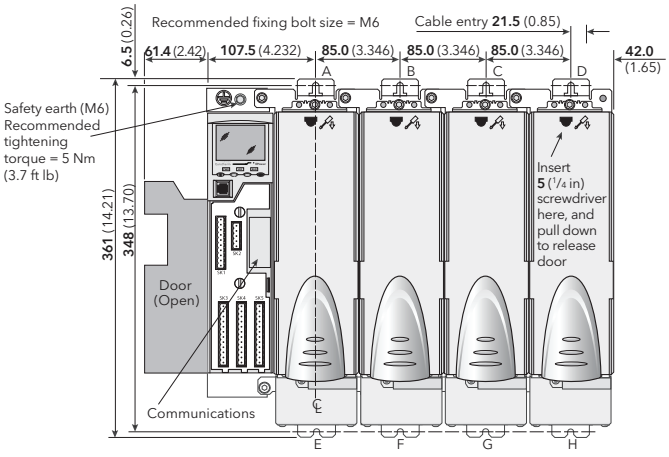**FRONT VIEW**

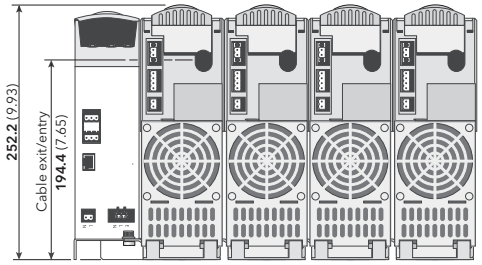







**VIEW ON UNDERSIDE**

**250Amps**

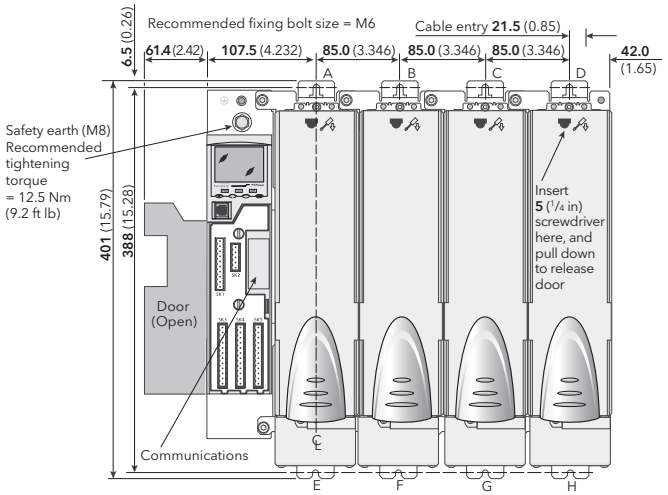**FRONT VIEW**

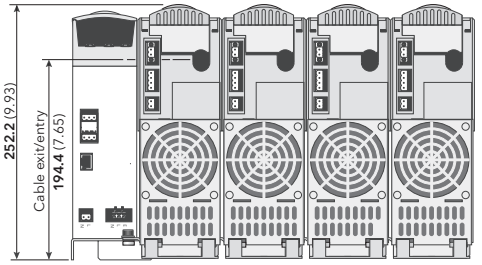







**VIEW ON UNDERSIDE**

**500Amps/630Amps**

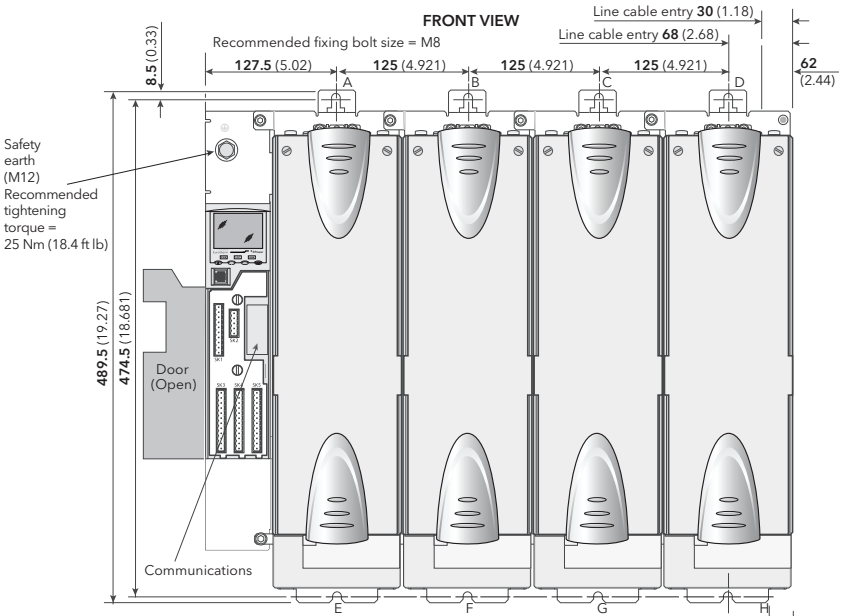
**FRONT VIEW**

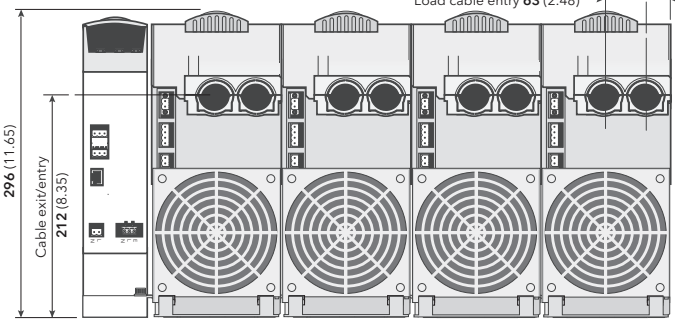


**VIEW ON UNDERSIDE**

## Order codes

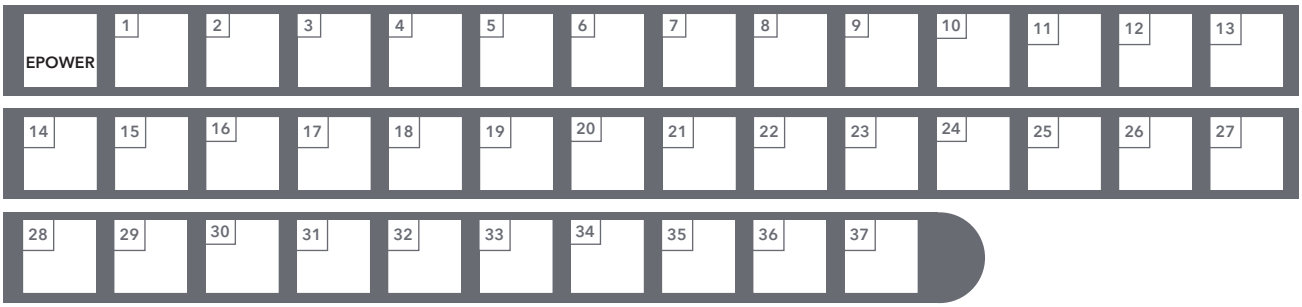


The code is divided in three sections:
1 Hardware, which defines the type, number and size of the unit and/or the modules.
2 Optional hardware and software functions.
3 QuickStart which is intend to configure the unit for maximum 60 to 80% of the application (single unit in 1, 2 or 3 legs configuration)

The code can then be either "Short" and include only the main hardware fields or "medium" and combine the hardware + the optional fields, or finally "Long" with the additional quick start code at the end.

### Basic Product

| | |
|---|---|
| EPOWER | Power Controller |

### 1 Phase/Amps

| | |
|---|---|
| 1PH-50A | 1 Phase unit 50A |
| 1PH-100A | 1 Phase unit 100A |
| 1PH-160A | 1 Phase unit 160A |
| 1PH-250A | 1 Phase unit 250A |
| 1PH-400A | 1 Phase unit 400A |
| 1PH-500A | 1 Phase unit 500A |
| 1PH-630A | 1 Phase unit 630A |
| 2PH-50A | 2 Phase unit 50A |
| 2PH-100A | 2 Phase unit 100A |
| 2PH-160A | 2 Phase unit 160A |
| 2PH-250A | 2 Phase unit 250A |
| 2PH-400A | 2 Phase unit 400A |
| 2PH-500A | 2 Phase unit 500A |
| 2PH-630A | 2 Phase unit 630A |
| 3PH-50A | 3 Phase unit 50A |
| 3PH-100A | 3 Phase unit 100A |
| 3PH-160A | 3 Phase unit 160A |
| 3PH-250A | 3 Phase unit 250A |
| 3PH-400A | 3 Phase unit 400A |
| 3PH-2500A | 3 Phase unit 250A |
| 3PH-630A | 3 Phase unit 630A |
| 4PH-50A | 4 Phase unit 50A |
| 4PH-100A | 4 Phase unit 100A |
| 4PH-160A | 4 Phase unit 160A |
| 4PH-250A | 4 Phase unit 250A |
| 4PH-400A | 4 Phase unit 400A |
| 4PH-500A | 4 Phase unit 500A |
| 4PH-630A | 4 Phase unit 630A |
| PWR-50A | 50A Power module |
| PWR-100A | 100A Power module |
| PWR-160A | 160A Power module |
| PWR-250A | 250A Power module |
| PWR-400A | 400A Power module |
| PWR-500A | 500A Power module |
| PWR-630A | 630A Power module |
| DRV-XXX | Driver module only |

### 2 Voltage

| | |
|---|---|
| 600V | 100V to 600V |
| 690V | 100V to 690V |
| XXX | For Driver mod only |

### 3 Fan Supply

| | |
|---|---|
| 230V | 230V ac ≥160A |
| 115V | 115V ac ≥160A |
| XXX | No fan ≤100A |

### 4 Warranty

| | |
|---|---|
| XXX | Standard |
| WL005 | 5 Year |
| USWL3 | US Extended |

### 5 Internal Use

| | |
|---|---|
| XXX | None |

### 6 Internal Use

| | |
|---|---|
| XXX | None |

### 7 Option

| | |
|---|---|
| XX | None - End of Code |
| 00 | Unit with options and/ or quick start definition |

### 8 Communications Protocol

| | |
|---|---|
| XX | No optional fieldbus communication |
| Y2 | 2-wire 485 Modbus (RJ45 connector) |
| PB | Profibus-DPV1 (with D type connector) |
| ET | Modbus-TCP |
| DN | DeviceNet |
| IP | Ethernet/IP |
| CC | CC-Link |
| PN | Profinet IO |

### 9 Module 1

| | |
|---|---|
| XX | None |
| IO | IO optional board |

### 10 Module 2

| | |
|---|---|
| XX | None |
| IO | IO optional board |

### 11 Module 3

| | |
|---|---|
| XX | None |
| IO | IO optional board |

### 12 Predictive Load Management

| | |
|---|---|
| XXX | None |
| PLM | Predictive Load Management |

### 13 External Feedback

| | |
|---|---|
| XX | None - Standard unit |
| XF | External feedback* |

* Factory option

### 14 Remote Panel

| | |
|---|---|
| XX | None |
| 32ENG | 32h8e English |
| 32FRA | 32h8e French |
| 32GER | 32h8e German |
| 32ITA | 32h8e Italian |
| 32SPA | 32h8e Spanish |

### 15 Software Option 1

| | |
|---|---|
| XXX | None |
| EMS | Energy Measurement (Counter) |
| LTC | Load Tap Changer |

### 16 Software Option 2

| | |
|---|---|
| XXX | None |
| EMS | Energy Measurement (Counter) |
| LTC | Load Tap Changer |

### 17 Not Used

| | |
|---|---|
| XX | Default |

### 18 Quick Start

| | |
|---|---|
| XX | None - End of code |
| QS | Quick Start config |

### 19 Language

| | |
|---|---|
| ENG | English |
| FRA | French |
| GER | German |
| ITA | Italian |
| SPA | Spanish |

### 20 Load Current (nominal)

| | |
|---|---|
| 16A | 16 Amps |
| 25A | 25 Amps |
| 40A | 40 Amps |
| 50A | 50 Amps |
| 63A | 63 Amps |
| 80A | 80 Amps |
| 100A | 100 Amps |
| 125A | 125 Amps (Note 1) |
| 160A | 160 Amps (Note 1) |
| 200A | 200 Amps (Note 1) |
| 250A | 250 Amps (Note 1) |
| 315A | 315 Amps (Note 1) |
| 400A | 400 Amps (Note 1) |
| 500A | 500 Amps (Note 1) |
| 630A | 630 Amps (Note 1) |

### 21 Load Voltage (nominal)

| | |
|---|---|
| 100V | 100 Volts |
| 110V | 110 Volts |
| 115V | 115 Volts |
| 120V | 120 Volts |
| 127V | 127 Volts |
| 200V | 200 Volts |
| 208V | 208 Volts |
| 220V | 220 Volts |
| 230V | 230 Volts |
| 240V | 240 Volts |
| 277V | 277 Volts |
| 380V | 380 Volts |
| 400V | 400 Volts |
| 415V | 415 Volts |
| 440V | 440 Volts |
| 460V | 460 Volts |
| 480V | 480 Volts |
| 500V | 500 Volts |
| 575V | 575 Volts |
| 600V | 600 Volts |
| 660V | 660 Volts (Note 2) |
| 690V | 690 Volts (Note 2) |



### 22 Control Type (Note 3)

| | |
|---|---|
| **1P** | Single phase |
| **2P** | Two phase control |
| **3P** | Three phase control |

### 23 Load Configuration (Note 4)

| | |
|---|---|
| **1P** | Single phase |
| **3S** | Star |
| **3D** | Delta |
| **4S** | Star with neutral |
| **6D** | Open delta |

### 24 Load Type

| | |
|---|---|
| **XX** | Resistive |
| **TR** | Transformer primary |

### 25 Firing Mode (Note 5)

| | |
|---|---|
| **PA** | Phase angle |
| **HC** | Half cycle |
| **BF** | Burst firing (default 16 cycles) |
| **FX** | Fix modulation period (default 2 seconds) |
| **LG** | Logic mode |

### 26 Feedback

| | |
|---|---|
| **V2** | RMS load voltage squared |
| **I2** | RMS load current squared |
| **TP** | True power |
| **VR** | RMS load voltage |
| **IR** | RMS load current |
| **OL** | Open loop |

### 27 Current Transfer Mode (Linear Current Limit) (Note 6)

| | |
|---|---|
| **XXX** | Off |
| **I2** | RMS load current squared transfer |
| **IR** | RMS load current transfer |

### 28 Analogue Input 1 Function (Note 6)

| | |
|---|---|
| **XX** | None |
| **SP** | Setpoint |
| **HR** | Setpoint limit |
| **IL** | Current limit |
| **VL** | Voltage limit |
| **PL** | Power limit |
| **TS** | Current transfer span |

### 29 Analogue Input 1 Type

| | |
|---|---|
| **XX** | None |
| **1V** | 1-5 Volt |
| **2V** | 2-10 Volt |
| **5V** | 0-5 Volt |
| **0A** | 0-20 mA |
| **4A** | 4-20 mA |

### 30 Analogue Input 2 Function (Note 6)

| | |
|---|---|
| **XX** | None |
| **SP** | Setpoint |
| **HR** | Setpoint limit |
| **IL** | Current limit |
| **VL** | Voltage limit |
| **PL** | Power limit |
| **TS** | Current transfer span |

### 31 Analogue Input 2 Type

| | |
|---|---|
| **XX** | None |
| **0V** | 0-10 Volt |
| **1V** | 1-5 Volt |
| **2V** | 2-10 Volt |
| **5V** | 0-5 Volt |
| **0A** | 0-20 mA |
| **4A** | 4-20 mA |

### 32 Analogue Output Function

| | |
|---|---|
| **XX** | None |
| **X** | None |
| **V** | Voltage |
| **I** | Current |
| **P** | Power |
| **R** | Impedance |

### 33 Analogue Output Type

| | |
|---|---|
| **XX** | None |
| **0V** | 0-10 Volt |
| **1V** | 1-5 Volt |
| **2V** | 2-10 Volt |
| **5V** | 0-5 Volt |
| **0A** | 0-20 mA |
| **4A** | 4-20 mA |

### 34 Digital Input 2 Function

| | |
|---|---|
| **XX** | None |
| **AK** | Alarm acknowledgement |
| **RS** | Remote setpoint selection |

### 35 Alarm Relay Configuration

| | |
|---|---|
| **XX** | None |
| **AA** | Any alarm |
| **PA** | Process alarms |
| **FB** | Fuse blown |

### 36 Load Management Configuration

| | |
|---|---|
| **XX** | None – Load Management disabled |
| **SH** | Sharing |
| **I1** | Incremental Type 1 |
| **I2** | Incremental Type 2 |
| **RI** | Rotating Incremental |
| **DC** | Distributed Control |
| **DI** | Distributed Control and Incremental Control |
| **RD** | Rotating Distributed and Incremental Control |

### 37 Predictive Load Management Address

| | |
|---|---|
| **XX** | Predictive Load Management address (00 to 63) Default address 00 |

**SPARE FUSE FOR POWER MODULES**

| Current rating amps | Fuse number |
|---|---|
| **50A** | **CS179139U315** |
| **100A** | **CS179139U315** |
| **160A** | **CS179139U315** |
| **250A** | **CS179139U350** |
| **400A** | **CS179439U630** |
| **500A** | **CS029859U630** |
| **630A** | **CS029960U900** |

*Notes*

1. *The maximum nominal current selectable is the current rating selected in Field 1.*
2. *Only available if 690V selected in Field 2.*
3. *Selection dependent on number of Phases selected in Field 1.*
   *1PH = IP only*
   *2PH = IP or 2P only*
   *3PH = IP or 3P only*
   *4PH = IP or 2P only*
4. *Selection dependent on number of Phases selected in Field 1.*
   *1PH = 1P only*
   *2PH = 1P, 3S or 3D only*
   *3PH = Any*
   *4PH = 1P, 3S or 3D only*
   *If IP selected in Field 22 only option is IP.*
5. *PA not selectable if 2P selected in Field 22.*
   *HC not selectable if TR selected in Field 24.*
6. *Except XX the selection in Fields 28 and 30 cannot be the same.*

# 32h8e EPower Remote Panel



Model number 32h8e is a horizontal 1/8DIN indicator and alarm unit that performs the dual function of remote display for EPower and independent 'policeman'. The latter is intended to disconnect should an overtemperature (or other excess process condition) occur.
32h8e communicates with EPower using Modbus protocol via the EIA485 RJ45 connector located on the underside of the EPower controller.

The remote panel is normally ordered as an option with EPower units. It is a fixed hardware build consisting of a relay output in OP1 and an analogue output in OP3. There are no user communications since this is used to communicate with EPower and the supply is high voltage only (100-240Vac). The unit is configured using 'QuickStart' code on initial start up.

The 32h8e is based on a 32h8i indicator and has the same and additional features as this instrument. For features not covered please refer to HA029005.


The 32h8e displays EPower Current, Voltage, Power and Setpoint parameters for each EPower Network. The Setpoint of the EPower networks can be adjusted via the 32h8e HMI. Indication of selected setpoint is included: local or remote.

### Wire sizes

The screw terminals accept wire sizes from 0.5 to 1.5mm (16 to 22AWG). Hinged covers prevent hands or metal making accidental contact with live wires. The rear screws should be tightened to 0.4Nm (3.3lb in).

⚠ Ensure that the supply to the unit does not exceed 240V ac +10%


## Mechanical Details

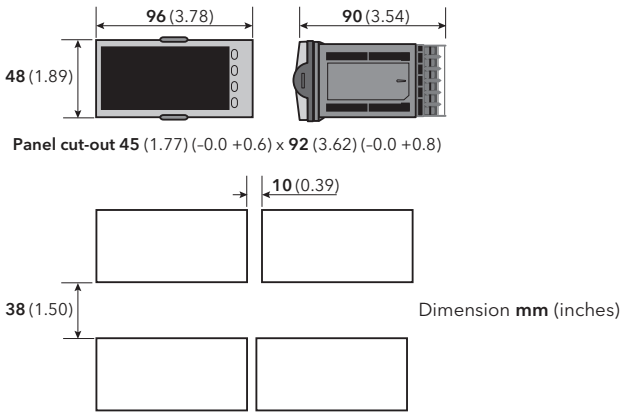



### Recommended minimum spacing

If more than one unit is mounted in the same panel they should be spaced to allow sufficient air flow between them.

## Rear Terminals

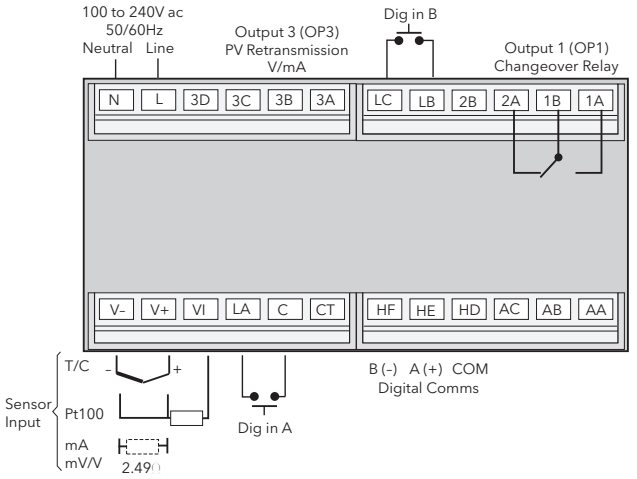


## Example Wiring Diagram

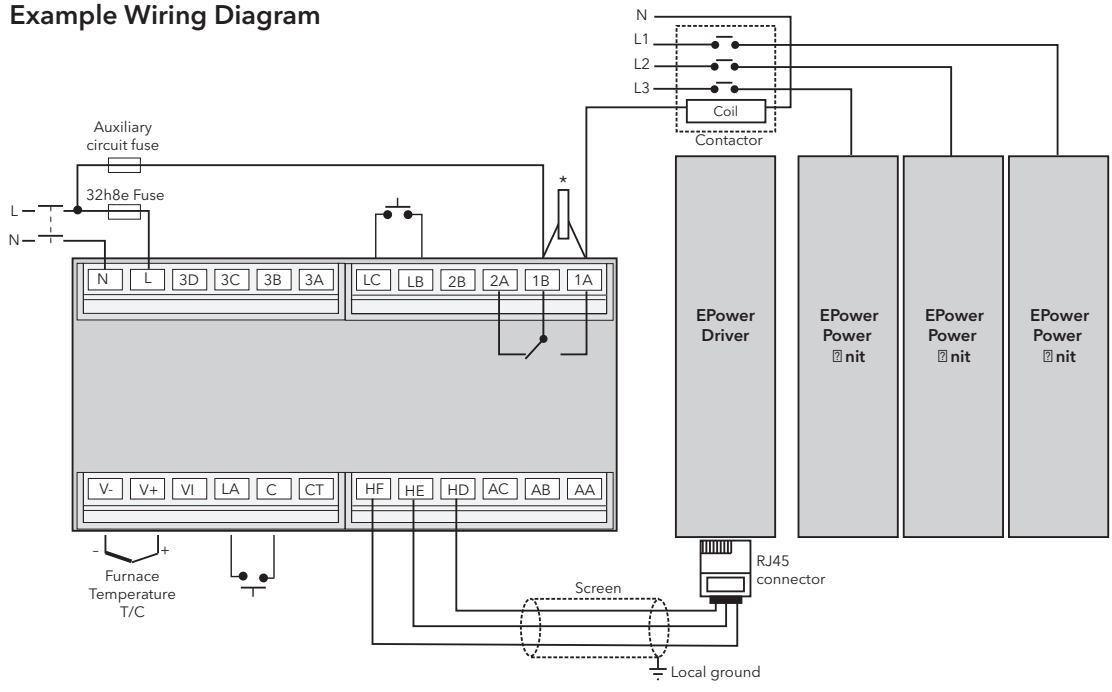


*** General notes about relays and Inductive Loads**

When switching inductive loads such as contactors or solenoid valves, wire the 22nF/100 'snubber' supplied across normally open relay terminals.

This will prolong contact life and reduce interference.

⚠ Snubbers pass 0.6mA at 110V and 1.2mA at 230V ac, which may sufficient to hold on high impedance loads.

# Specification - 32h8e Remote display

## General

### Environmental performance

| | | |
|---|---|---|
| Temperature limits | Operation: | 0 to 55°C |
| | Storage: | -10 to 70°C |
| Humidity limits | Operation: | 5 to 85% RH non condensing |
| | Storage: | 5 to 85% RH non condensing |
| Panel sealing: | | IP65, Nema 4X |
| Shock: | | BS EN61010 |
| Vibration: | | 2g peak, 10 to 150Hz |
| Altitude: | | <2000 metres |
| Atmospheres: | | Not suitable for use in explosive or corrosive atmosphere |

### Electromagnetic compatibility (EMC)

| | |
|---|---|
| Emissions and immunity: | BS EN61326 |

### Electrical safety

| | |
|---|---|
| (BS EN61010): | Installation cat. II; Pollution degree 2 |

INSTALLATION CATEGORY II
The rate impulse voltage for equipment on nominal 230V mains is 2500V.

POLLUTION DEGREE 2
Normally, only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation shall be expected

### Physical

| | |
|---|---|
| Panel mounting: | 1/8 DIN, horizontal |
| Dimensions and weight: | 96mm (3.78") W x 48mm (1.89") H x 90mm (3.54 inches) D, 350g (0.77lbs) |
| Panel cut-out dimensions: | 92mm (1.77 inches W x 45mm (3.62 inches) H |

### Operator interface

| | |
|---|---|
| Type: | LCD TN with backlight |
| Main PV display: | 5 digits, green or red |
| Lower display: | 9 character starburst, green |
| Status beacons: | Units, outputs, alarms |

### Power requirements

| | |
|---|---|
| Voltage: | 100 to 240V ac, –15%, +10%, max 9W |
| Frequency: | 48 to 62Hz |

### Approvals

CE, cUL listed (file E57766)

## Communications

Serial communications option

| | |
|---|---|
| Protocol: | Modbus RTU Master |
| Isolation: | 264V ac, double insulated |
| Transmission standard: | EIA485 (2 wire) |

The 32h8e has Modbus Master RS485 Comms with a fixed set of EPower Modbus addresses. Power up the display for the first time, configure the QuickStart code for the standard indicator functions, and the process values and alarm messages are immediately displayed, automatically configured to match the EPower display - for example RMS values or average values for current, voltage and power displayed as 3 phase or as several times single phase as defined by the EPower configuration.

| 32h8e Terminal | | | RJ45 Pin Number |
|---|---|---|---|
| HD | White/Green | Common | 3 |
| HE | Orange | Rx A(+) | 2 |
| HF | White/Orange | Tx B(-) | 1 |

## Process variable input

| | |
|---|---|
| Calibration accuracy: | <±0.25% of reading ±1LSD (Note 1) |
| Sample rate: | 9Hz(110ms) |
| Isolation: | 264V ac double insulation from the PSU and communication |
| Resolution (µV): | <0.5µV with 1.6s filter (mV range)<br><0.25mV with 1.6s filter (Volts range) |
| Resolution (effective bits): | >17 bits |
| Linearisation accuracy: | < 0.1% of reading |
| Drift with temperature: | <50ppm (typical) <100ppm (worst case) |
| Common mode rejection: | 48-62Hz, >-120db |
| Series mode rejection: | 48-62Hz, >-93dB |
| Input impedance: | 100MΩ (200KΩ on volts range C) |
| Cold junction compensation: | >30/1 rejection of ambient change |
| External cold junction: | Reference of 0°C |
| Cold junction accuracy: | <±1°C at 25°C ambient |
| Linear (process) input range: | –10 to 80mV, 0 to 10V |
| Thermocouple types: | K, J, N, R, S, B, L, T, C, custom download (Note 2) |
| Resistance thermometer types: | 3-wire Pt100 DIN 43760 |
| Bulb current: | 0.2mA |
| Lead compensation: | No error for 22 ohms in all leads |
| Input filter: | Off to 100s |
| Zero offset: | User adjustable over full range |
| User calibration: | 2-point gain & offset |

**Notes**

(1) Calibration accuracy quoted over full ambient operating range and for all input linearisation types
(2) Contact Eurotherm for details of availability of custom downloads for alternative sensors

## OP 1

| | |
|---|---|
| Type: | Form C (changeover) |
| Rating: | Min 100mA @12V dc, max 2A@240V ac resistive |
| Functions: | Alarms, events |

## OP 3

| | | |
|---|---|---|
| Isolation: | | 264V ac double insulated |
| Functions: | | Retransmission |
| Current output | | |
| | Rating: | 0-20mA into <500Ω |
| | Accuracy: | ±(<0.25% of Reading + <50µA) |
| | Resolution: | 13.6 bits |
| Voltage output | | |
| | Rating: | 0-10V into >500Ω |
| | Accuracy: | ±(<0.25% of Reading +<25mV) |
| Resolution: | | 13.6 bits |

## Software features

### Alarms

| | |
|---|---|
| Number: | 4 |
| Type: | Absolute high & low, Rate of change (rising or falling) |
| Latching: | Auto or manual latching, non-latching, event only |
| Output assignment: | Up to four conditions can be assigned to one output |
| EPower Alarms: | Missing mains, Thyristor short circuit, Open thyristor, Fuse blown, Over temperature, Voltage dips, Frequency fault, Power module 24V fault, Total load failure, Chop off, Partial Load Failure, Partial Load Unbalance, Volt fault, Temperature pre alarm, Power module wdog fault, Power module comms error, Power module timeout, Closed loop, Output fault |

The pre-set alarms have a fixed medium priority enables indicator alarms to be configured as lower, the same or higher priority.
EPower alarms can be globally acknowledged via the 32h8e HMI.

### Other status outputs

| | |
|---|---|
| Functions: | Including sensor break, power fail, new alarm, pre-alarm |
| Output assignment: | Up to four conditions can be assigned to one output |

### Custom messages

| | |
|---|---|
| Number: | 15 scrolling text messages |
| No of characters: | 127 characters per message max |
| Languages: | English, German, French, Spanish, Italian |
| Selection: | Active on any parameter status using conditional command |

### Recipes

| | |
|---|---|
| Number: | 5 recipes with 19 parameters |
| Selection: | HMI interface, communications or digital IO |

### Other features

| | |
|---|---|
| Display colour: | Upper display selectable green or red or change on alarm |
| Scrolling text: | Parameter help, custom messages |
| Display filter: | Off to zero last 2 digits |
| Peak monitor: | Stores high and low values |

## 32h8e Initial configuration

At first switch on, after the start-up sequence, the initial configuration page is displayed.

Note: the following 'quickstart' description apples only to new (not previously configured) instruments. If the instrument has previously been configured (either at the factory or subsequently) the instruments starts up showing the relevant process value.

The initial display shows 'Set1' on the top line, with a coded display below with its first item flashing. The lower line is decoded as shown in table.




The 'mode' (up/down arrows) are used to scroll through the available choices for each item. Once the required value is displayed, the scroll key is used to select the next character for editing. Once all five characters have been edited, further operations of the scroll key call the range high display (allowing the high range value to be edited usingthe mode keys), then the range low display (allowing the low range value to be edited). A further operation calls the Set2 display, which is decoded in the table below.

**Set1 Display**

JF.0GP.

**Input type**

| | |
|---|---|
| B | Type B T/C |
| J | Type J T/C |
| K | Type K T/C |
| L | Type L T/C |
| N | Type N T/C |
| R | Type R T/C |
| S | Type S T/C |
| T | Type T T/C |
| C | Custom T/C |
| P | Pt100 RTD |
| M | Linear 0 to 80 mV |
| 2 | Linear 0 to 20 mA |
| 4 | Linear 4 to 20 mA |
| 0 | Linear 0 to 10V dc |
| 3 | Linear 2 to 10V dc |
| 6 | Linear 0 to 5V dc |

**Display units**

| | | | |
|---|---|---|---|
| C | Degrees Celsius | A | T orr |
| F | Degrees Fahrenheit | B | litres/hr |
| K | Kelvins | D | litres/min |
| * | None | E | % RH |
| P | % | G | %O2 |
| 0 | Pa (Pascals) | H | %CO2 |
| 1 | mPa (milli Pascals) | J | %CP |
| 2 | kPa (kilo Pascals) | L | V |
| 3 | Bar | M | Amp |
| 4 | mBar | R | m A |
| 5 | PSI | T | m V |
| 6 | kg/cm | U | Ohm |
| 7 | mmWG | W | ppm |
| 8 | inWG | Y | RPM |
| 9 | mmHg | Z | m etres/sec |

**Decimal places**

| | |
|---|---|
| 0 | nnnnn |
| 1 | nnnn.n |
| 2 | nnn.nn |
| 3 | nn.nnn |
| 4 | n.nnnn |

**Display top line (PV) colour**

| | |
|---|---|
| G | Green |
| R | Red |
| C | Red in alarm, else green |

**Home display**

| | |
|---|---|
| N | PV only |
| A | First alarm setpoint (SP) only |
| 1 | PV + Alarm SP (Read/Write) |
| 2 | PV + Alarm SP (Read only) |
| I | Current (see note) |
| V | Voltage (see note) |
| P | Power (see note) |

**Note:**
The default display for I, V and P is network 1. The 'page' key isused to access the parameter for other networks.

Page key

Scroll key

Mode keys

After Set2 parameters have been edited, a further operation of the scroll key invites the user to Exit. Operating the scroll key returns to the Set1 display; operating a mode key to display 'yes' quits the quickstart menuand causes the unit to enter operating mode.

**Set2 parameter coding**

nSxIIn

**Relay output (OP1)**

| | |
|---|---|
| x | Not configured |
| H | High alarm only |
| L | Low alarm only |
| R | Rate of change (ROC) alarm only |
| N | New alarm |
| O | Sensor break only |
| P | After power fail only |
| 7 | High alarm or sensor break |
| 8 | Low alarm or sensor break |
| 9 | ROC alarm or sensor break |
| A | High alarm or after power fail |
| B | Low alarm or after power fail |
| C | ROC alarm or after power fail |
| E | High alarm or sensor break or power fail |
| F | Low alarm or sensor break or power fail |
| G | ROC alarm or sensor break or power fail |

**Analogue output (OP3)**

| | |
|---|---|
| x | Not configured |
| 1 | 4 to 20mA output |
| 2 | 0 to 20mA output |
| 3 | 0 to 5 V dc output |
| 4 | 1 to 5V dc output |
| 5 | 0 to 10V dc output |
| 6 | 2 to 10V dc output |

**Not used**

**Digital input A**

| | |
|---|---|
| x | Not configured |
| W | Alarm acknowledge |
| K | Keylock |
| U | Remote up button |
| D | Remote down button |
| V | Recipe 2/ select |
| J | Alarm inhibit |
| M | Peak Reset |
| Y | Freeze PV |

**Digital input B**

| | |
|---|---|
| x | Not configured |
| W | Alarm acknowledge |
| K | Keylock |
| U | Remote up button |
| D | Remote down button |
| V | Recipe 2/ select |
| J | Alarm inhibit |
| M | Peak Reset |
| Y | Freeze PV |


Eurotherm: International sales and service www.eurotherm.com

**AUSTRALIA** Sydney
**T** (+61 2) 9838 0099
**E** *info.eurotherm.au@invensys.com*

**AUSTRIA** Vienna
**T** (+43 1) 7987601
**E** *info.eurotherm.at@invensys.com*

**BELGIUM & LUXEMBOURG** Moha
**T** (+32) 85 274080
**E** *info.eurotherm.be@invensys.com*

**BRAZIL** Campinas-SP
**T** (+5519) 3707 5333
**E** *info.eurotherm.br@invensys.com*

**CHINA**
**T** (+86 21) 61451188
**E** *info.eurothermcn@invensys.com*
Beijing Office
**T** (+86 10) 5909 5700
**E** *info.eurotherm.cn@invensys.com*

**DENMARK** Copenhagen
**T** (+45 70) 234670
**E** *info.eurotherm.dk@invensys.com*

**FINLAND** Abo
**T** (+358) 22506030
**E** *info.eurotherm.fi@invensys.com*

**FRANCE** Lyon
**T** (+33 478) 664500
**E** *info.eurotherm.fr@invensys.com*

**GERMANY** Limburg
**T** (+49 6431) 2980
**E** *info.eurotherm.de@invensys.com*

**INDIA** Chennai
**T** (+91 44) 24961129
**E** *info.eurotherm.in@invensys.com*

**IRELAND** Dublin
**T** (+353 1) 4691800
**E** *info.eurotherm.ie@invensys.com*

**ITALY** Como
**T** (+39 031) 975111
**E** *info.eurotherm.it@invensys.com*

**KOREA** Seoul
**T** (+82 31) 2738507
**E** *info.eurotherm.kr@invensys.com*

**NETHERLANDS** Alphen a/d Rijn
**T** (+31 172) 411752
**E** *info.eurotherm.nl@invensys.com*

**NORWAY** Oslo
**T** (+47 67) 592170
**E** info.eurotherm.no@invensys.com

**POLAND** Katowice
**T** (+48 32) 78395000
**E** *info.eurotherm.pl@invensys.com*

**SPAIN** Madrid
**T** (+34 91) 6616001
**E** *info.eurotherm.es@invensys.com*

**SWEDEN** Malmo
**T** (+46 40) 384500
**E** *info.eurotherm.se@invensys.com*

**SWITZERLAND** Wollerau
**T** (+41 44) 7871040
**E** *info.eurotherm.ch@invensys.com*

**UNITED KINGDOM** Worthing
**T** (+44 1903) 268500
**E** *info.eurotherm.uk@invensys.com*

**U.S.A.** Ashburn VA
**T** (+1 703) 724 7300
**E** *info.eurotherm.us@invensys.com*


ED61


© Copyright Eurotherm Limited 2010

Invensys, Eurotherm, the Eurotherm logo, Chessell, EurothermSuite, Mini8, Eycon, Eyris, EPower nanodac and Wonderware are trademarks of Invensys plc, its subsidiaries and affiliates. All other brands may be trademarks of their respective owners.

All rights are strictly reserved. No part of this document may be reproduced, modified, or transmitted in any form by any means, nor may it be stored in a retrieval system other than for the purpose to act as an aid in operating the equipment to which the document relates, without the prior written permission of Eurotherm limited.

Eurotherm Limited pursues a policy of continuous development and product improvement. The specifications in this document may therefore be changed without notice. The information in this document is given in good faith, but is intended for guidance only.

Eurotherm Limited will accept no responsibility for any losses arising from errors in this document.

invensys
Operations Management